




Handspring Visor Edge Battery Replacement

This guide will walk you through installing a new battery into your Handspring Visor Edge.

Written By: Christian Valoria

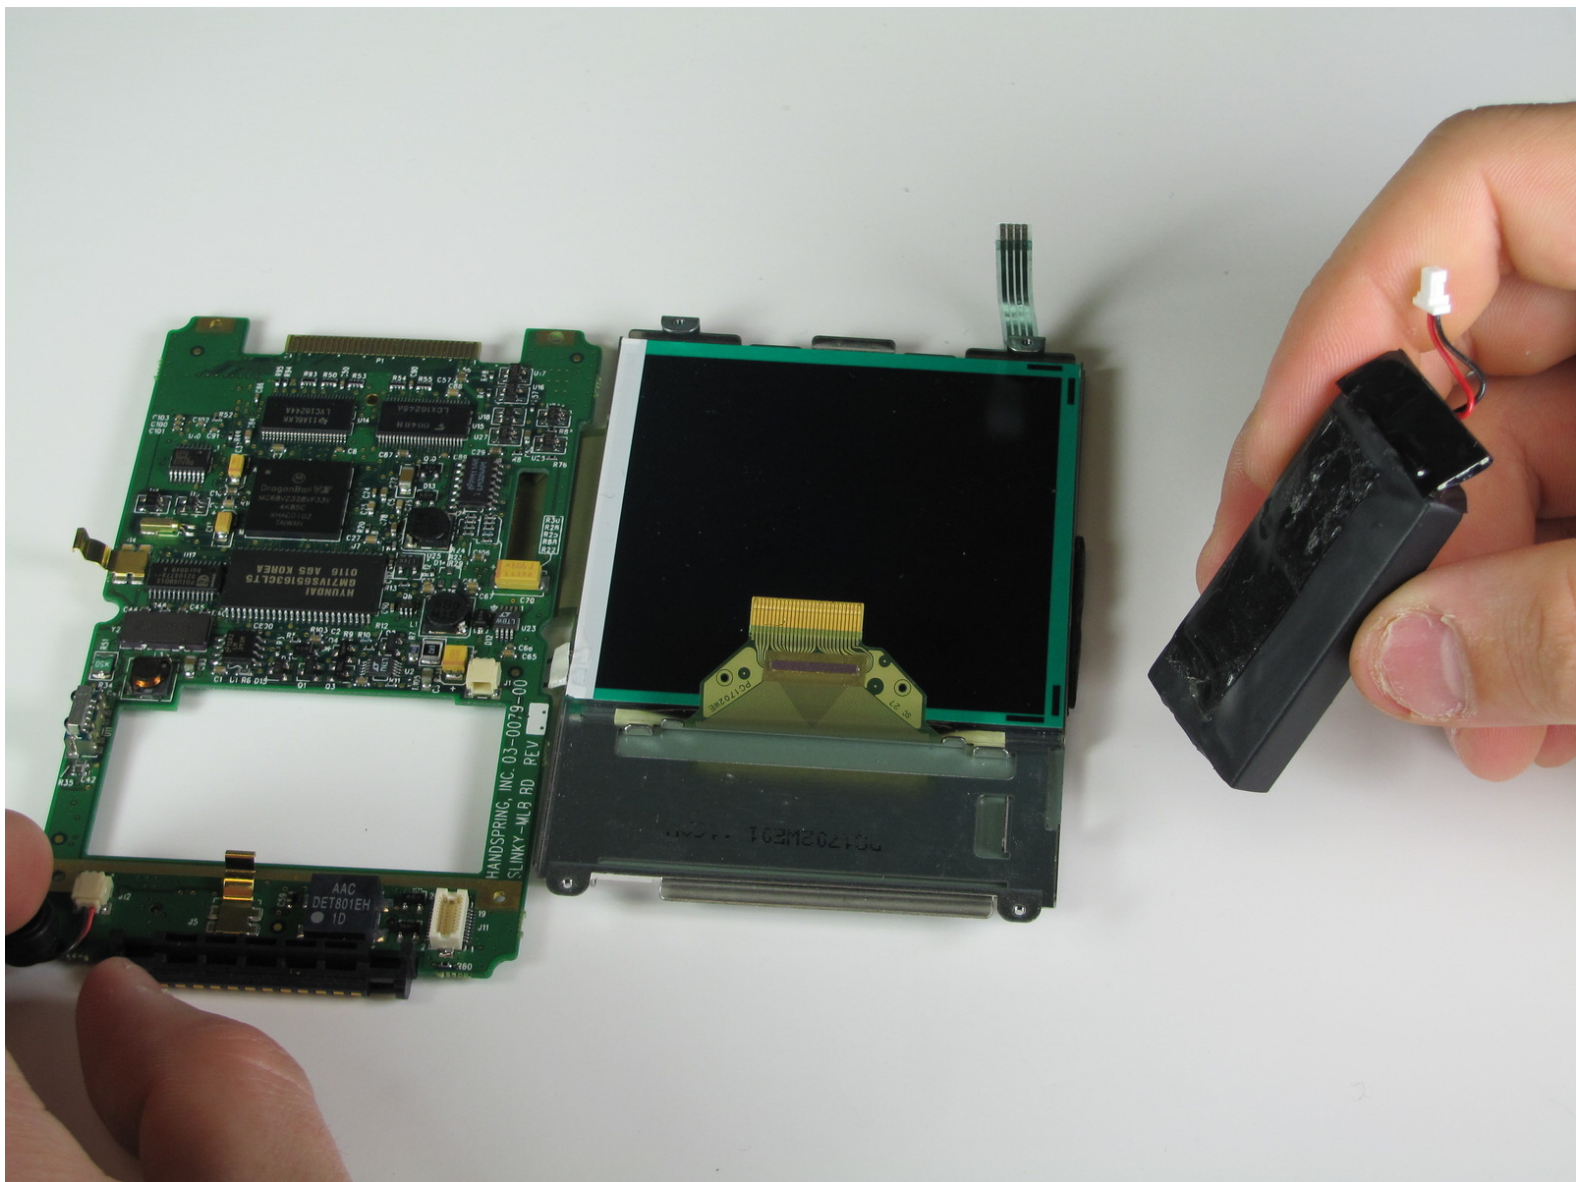


INTRODUCTION

You will be able to use this guide as long as you know how to use a screwdriver.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Flip Cover

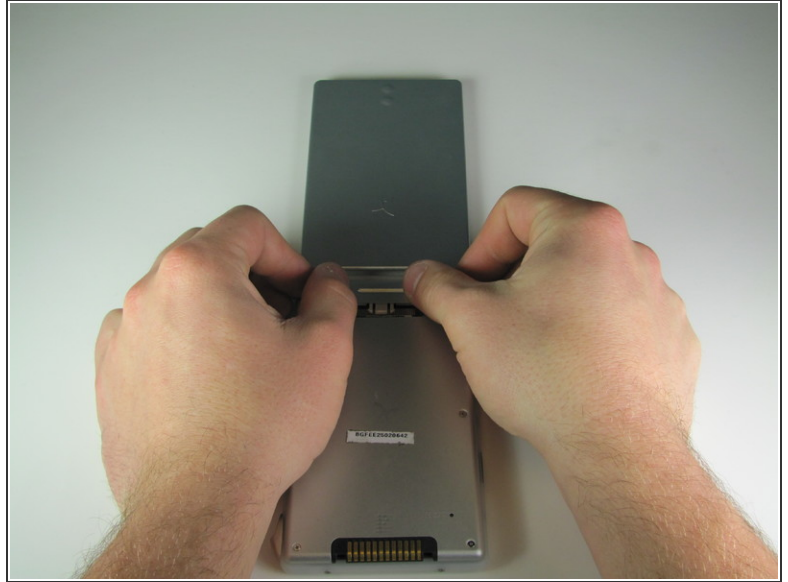

- Place Visor Edge face down.
- Notice the tab connecting the flip cover to the back of the PDA.
- Gently push tab forward.

 Do not pull on the flip cover to try and remove it from the PDA.

Step 2 — Back Panel

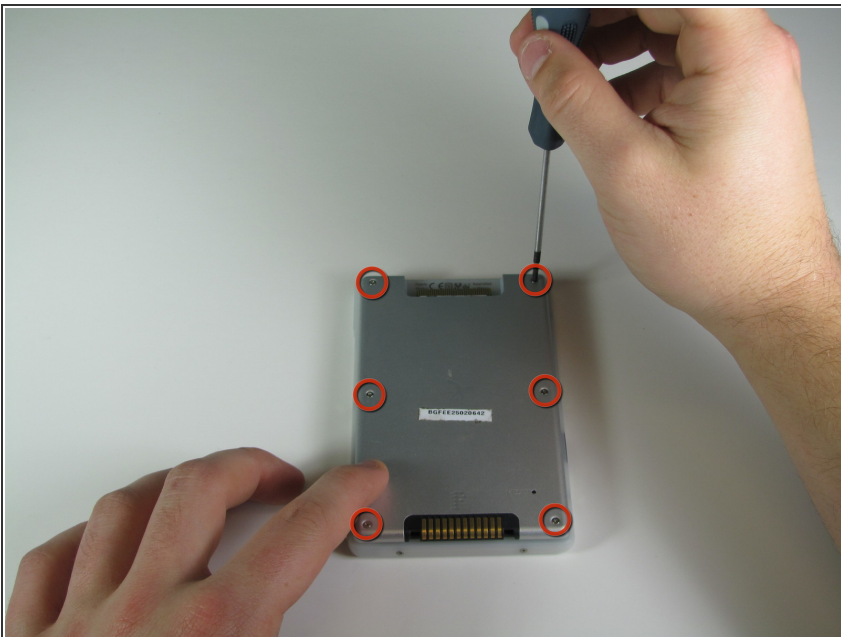

- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

Step 3




- Remove the black plate from the PDA.

Step 4




- Remove four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the remaining 3.9 mm Philips screw holding together the stylus holster and the frame.

Step 5

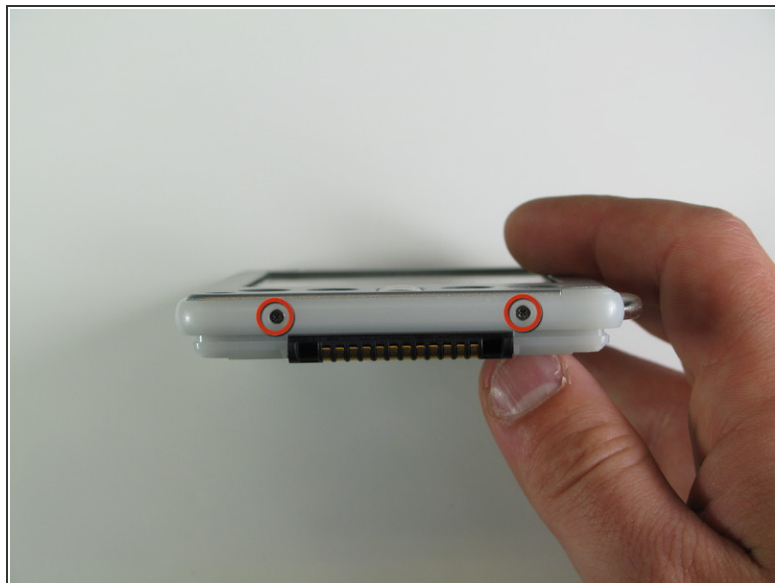

- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.


Step 6

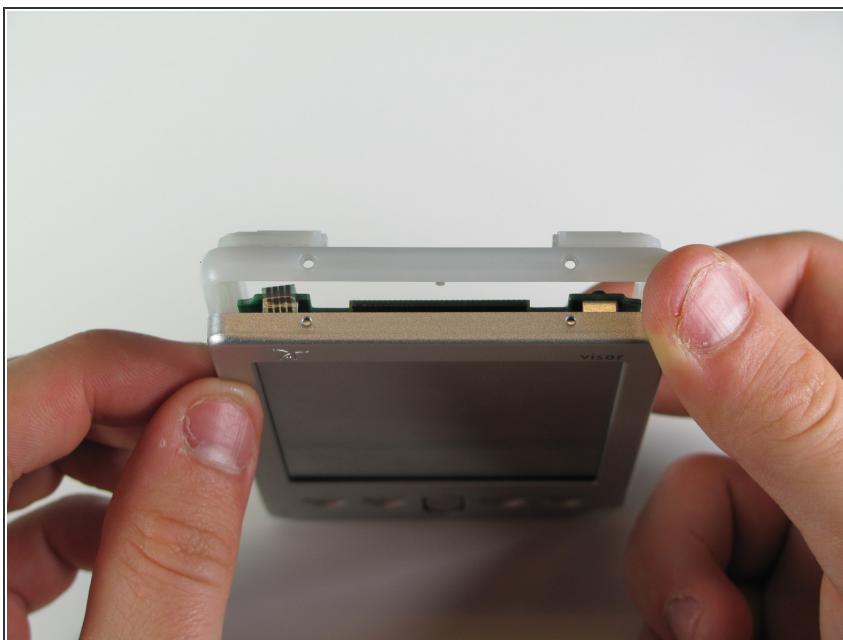

- Remove the white frame from the PDA.



⚠ The frame may get stuck on the corners so be very gentle when working the corners off.

Step 7 — Battery

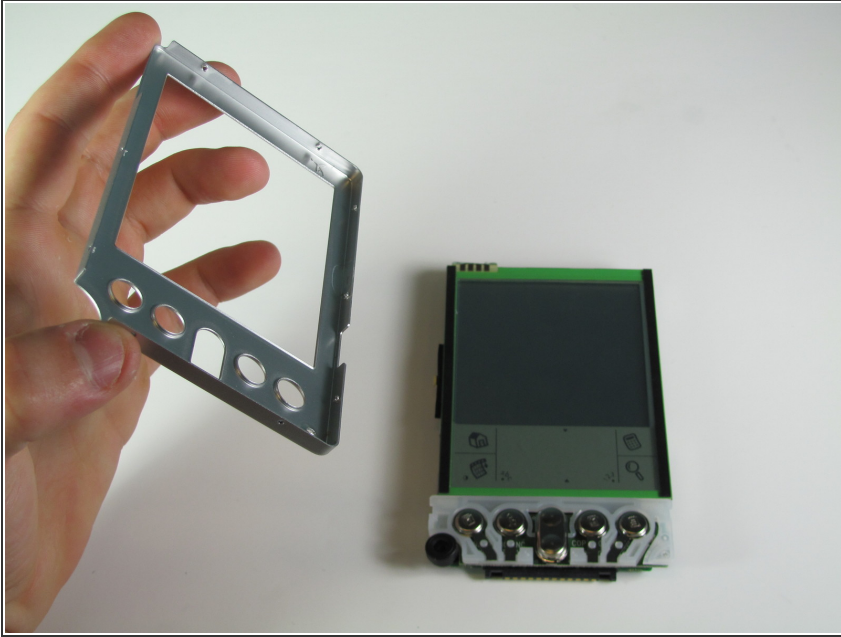


- Pull front cover off gently.

Step 8

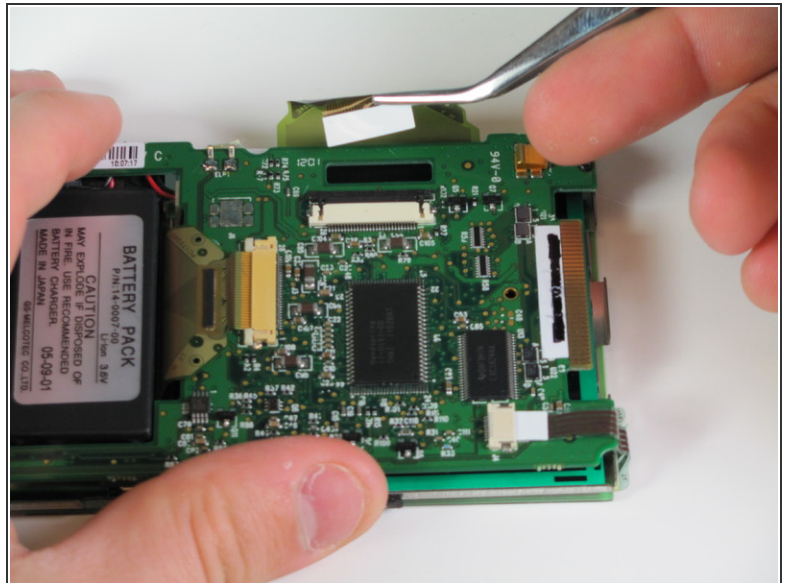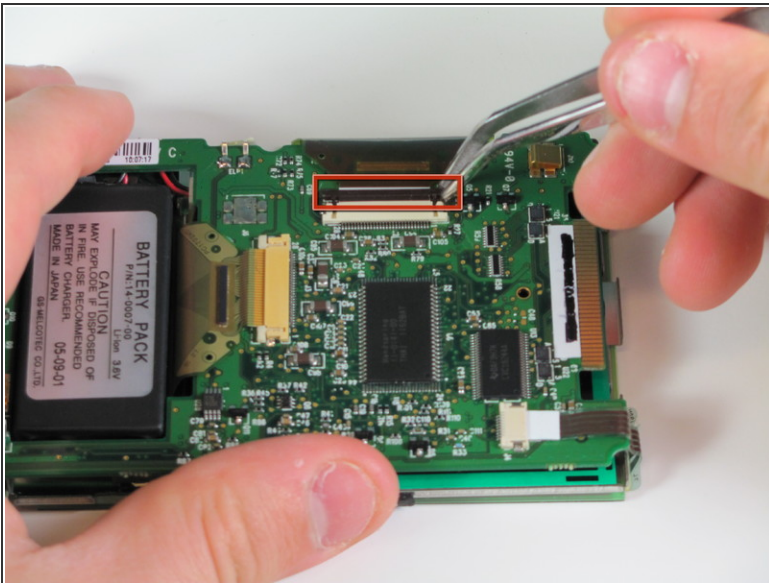

- Using your finger or tweezers, carefully push back the brown lock holding the ribbon cable on the side of the circuit board.
- Remove ribbon cable with tweezers.


Step 9

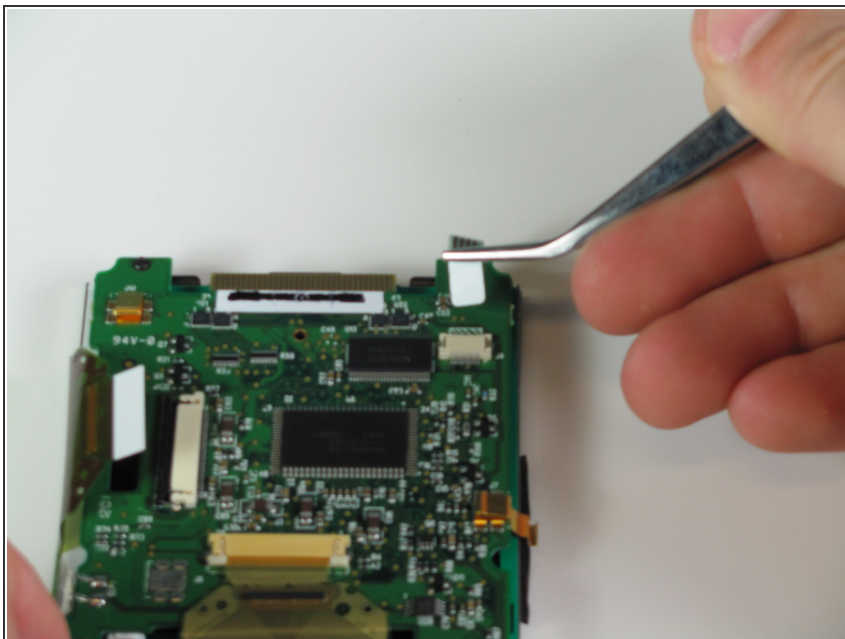

- Using the tweezers, pull back the ribbon cable on the top of the device.

⚠ Pull by white part of the ribbon to avoid tearing.

Step 10

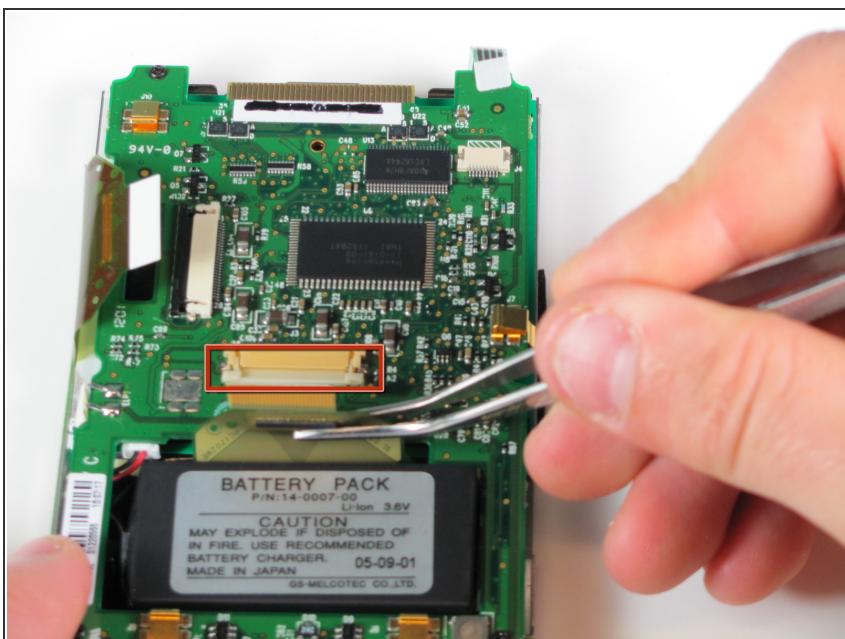



- Using the same technique as with the other ribbons, locate and remove the ribbon cable above the battery pack.

Step 11





- ❗ All the ribbon cables should be disconnected from the mother board.
- Remove the four 3.6 mm Philips screws at each corner of the device.

Step 12

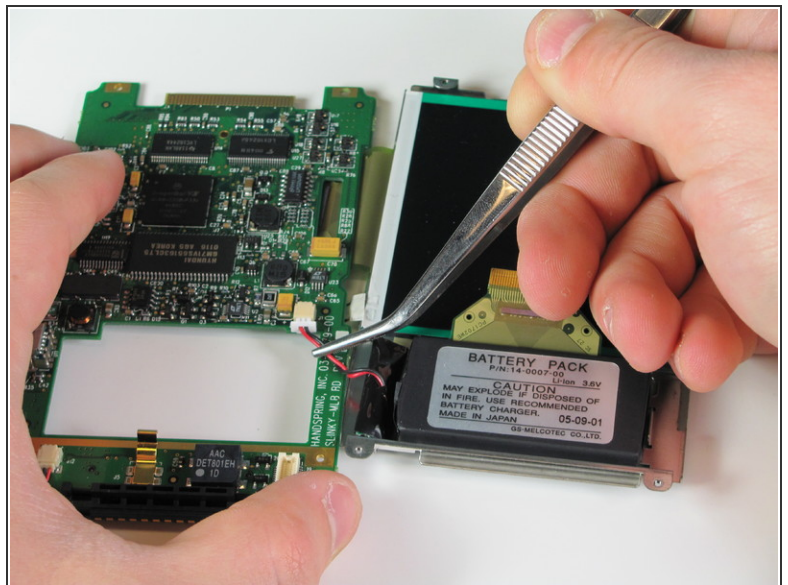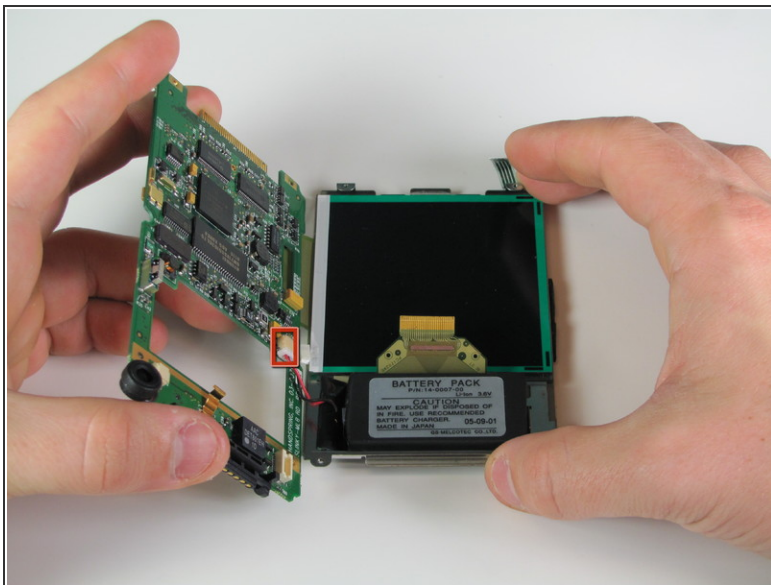

- Carefully separate the circuit board and the screen.
- ⚠ The circuit board isn't fully disconnected, be sure to not break the soldered wires connecting both components.
- Remove the wire connecting the battery pack to the motherboard using tweezers.

Step 13

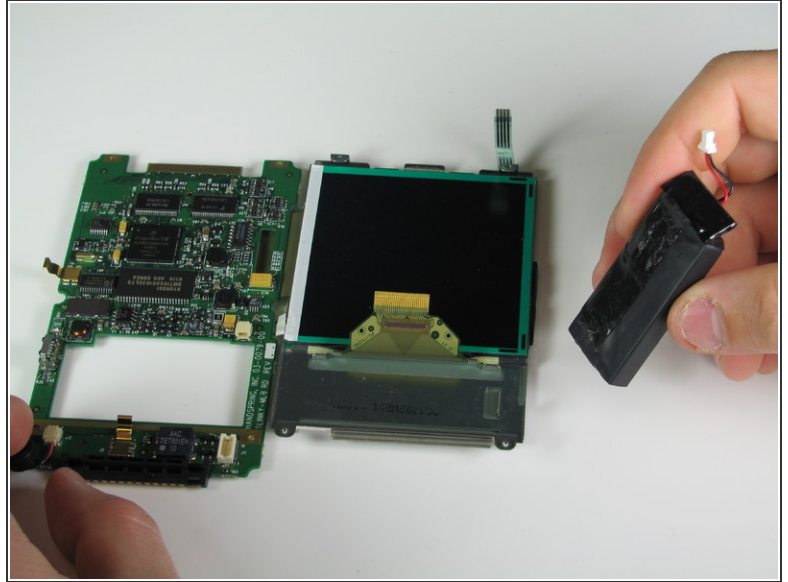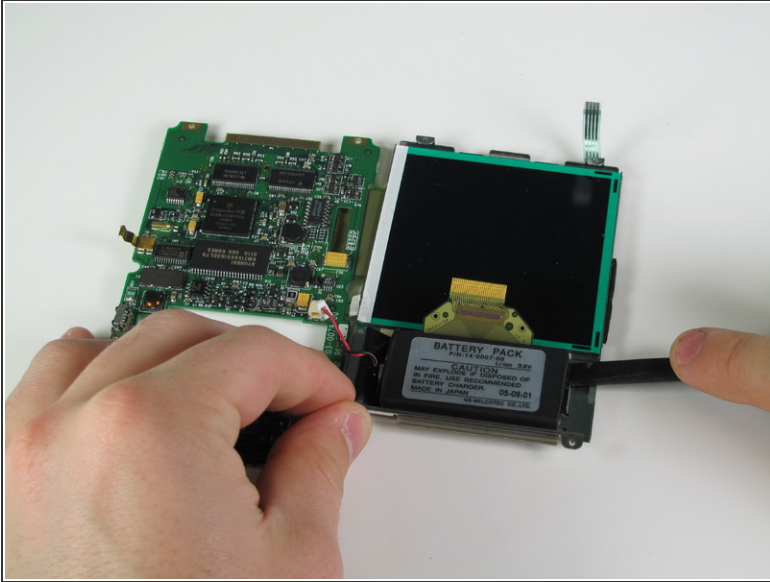

- The battery is stuck on by an adhesive, wedge the spudger under the battery and pry apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:35:57 AM.